


Installation Guide

# DEVIreg™ 132

Electronic Thermostat



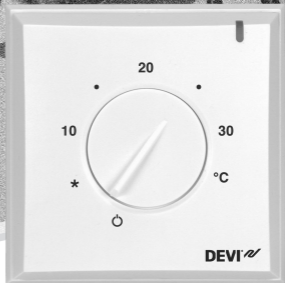

---

## Table of Contents

---

<b>1</b>	<b>Introduction</b> . . . . .	<b>3</b>
	1.1 Technical Specifications . . . . .	4
	1.2 Safety Instructions . . . . .	5
<b>2</b>	<b>Mounting Instructions</b> . . . . .	<b>6</b>
<b>3</b>	<b>Settings</b> . . . . .	<b>10</b>
<b>4</b>	<b>Warranty</b> . . . . .	<b>12</b>
<b>5</b>	<b>Disposal Instruction</b> . . . . .	<b>13</b>

## 1 Introduction

---


DEVIreg™ 132 is an electronic thermostat to be installed directly on the wall. It is provided with a room sensor to control the room temperature and an additional floor sensor to limit the maximum floor temperature.

The thermostat has a button for adjusting the temperature, with a scale from ( ) 5-45°C, and an LED indicator showing standby (green light) and heating periods (red light).

**More information on this product can also be found at:**  
**[devireg.devi.com](http://devireg.devi.com)**

## 1.1 Technical Specifications

Operation voltage	220-240V~, 50Hz
Standby power consumption	Max 5W
Relay: Resistive load Inductive load	Max 16A / 3680W @ 230V cos φ= 0.3 max 1A
Sensing units	NTC 15 kOhm at 25°C
Sensing values: 0°C 25°C 50°C	42 kOhm 15 kOhm 6 kOhm
Hysteresis	± 0.2°C
Ambient temperature	0 to +30°C
Frost protection temperature	5°C - ❄
Temperature range	5-35°C room temperature 20-50°C floor temperature limiter - default 35°C
Cable specification max	1x4mm <sup>2</sup> or 2x2,5mm <sup>2</sup>
Ball pressure temperature	75°C
Pollution degree	Degree 2 (domestic use)

Type	1C
Storage temperature	-20 to +65°C
IP class	30
Protection class	Class II - 
Dimensions	82 x 82 x 36mm
Weight	90g

The product complies with the EN/IEC Standard "Automatic electrical controls for household and similar use":

- EN/IEC 60730-1 (general)
- EN/IEC 60730-2-9 (thermostat)

## 1.2 Safety Instructions

Make sure the mains supply to the thermostat is turned off before installation.

**IMPORTANT:** When the thermostat is used to control a floor heating element in connection with a wooden floor or similar material, always use a floor sensor and never set the maximum floor temperature to more than 35°C.


Please also note the following:

- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.
- The thermostat must be connected to a power supply via an all-pole disconnection switch.
- The sensor is to be considered as live voltage. Have this in mind if the sensor must be extended.
- Always connect the thermostat to continuous power supply.
- Do not expose the thermostat to moisture, water, dust, and excessive heat.

## 2 Mounting Instructions

---

Please observe the following placement guidelines:



Place the thermostat at a suitable height on the wall (typically 80-170 cm.).



In wet rooms, place the thermostat according to local regulation on IP classes.




Do not place the thermostat on the inner side of an exterior wall.



Always install the thermostat at least 50 cm from windows and doors.



Do not place the thermostat in a way that it will be exposed to direct sunlight.




**Note:** A floor sensor enables a more accurate temperature control and is recommended in all floor heating applications and **mandatory** under wooden floors to reduce the risk of over-heating the floor.

- Place the floor sensor in a conduit in an appropriate place where it is not exposed to sunlight or draft from door openings.
- Equally distant and >2cm from two heating cables.

- The conduit should be flush with the floor surface - countersink the conduit if necessary.
- Route the conduit to the connection box.
- The bending radius of the conduit must be min 50mm.

### Follow the steps below to mount the thermostat:


1. Open the thermostat:

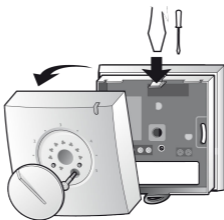

- Remove the button to get access to the screw which holds the front.
- Loosen the screw.
- Push down the release tab at the top of the thermostat using a flat object while slowly pulling off the front cover.




- Fasten the thermostat directly to the wall by driving the screws through the holes in each side of the thermostat.

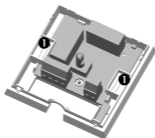

**1** = Screw holes for fastening the thermostat.

- Connect the thermostat according to the connection diagram.

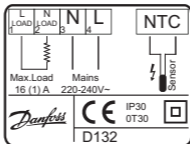

The screen of the heating cable must be connected via a connector together with the earth conductor of the power supply cable.


Note: Always install the floor sensor in a conduit in the floor.

4. Set the maximum floor temperature between 20° and 50°C by using a thin screwdriver on the black electronic component with temperature indications in the upper right corner.
5. Install the front cover and button in the reverse order of disassembly.
6. Turn on the power supply.

### 3 Settings

#### How to change the minimum and maximum floor temperatures

1. Lift off the adjustment button using a thin screwdriver. (1)
2. Move the pins to the desired positions. (2 and 3)
3. Put the adjustment button back in place.

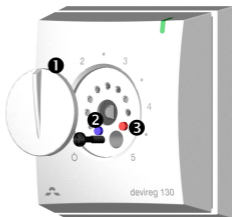

Please be aware of the following:

- The floor temperature is measured where the sensor is placed.
- The temperature of the bottom of a wooden floor can be up to 10 degrees higher than the top.
- Floor manufactures often specify the max temperature on the top surface of the floor (usually 27-28°C).
- By default, the maximum floor temperature is set to 35°C.
- Always use a floor sensor or a room + floor sensor combination to control floor heating. Without a floor sensor, the temperature control may be less accurate and you risk overheating the floor.

Thermal resistance [m <sup>2</sup> K/W]	Examples of flooring	Details	Approximate setting for 25°C floor temperature
0.05	8 mm HDF based laminate	> 800 kg/m <sup>3</sup>	28°C
0.10	14 mm beech parquet	650 - 800 kg/m <sup>3</sup>	31°C
0.13	22 mm solid oak plank	> 800 kg/m <sup>3</sup>	32°C
< 0.17	Max. carpet thickness suitable for floor heating	acc. to EN 1307	34°C
0.18	22 mm solid fir planks	450 - 650 kg/m <sup>3</sup>	35°C

## 4 Warranty



---

## 5 Disposal Instruction

---





Danfoss A/S  
Electric Heating Systems  
Ulvehavevej 61  
7100 Vejle  
Denmark  
Phone: +45 7488 8500  
Fax: +45 7488 8501  
E-mail: [EH@DEVI.com](mailto:EH@DEVI.com)  
[www.DEVI.com](http://www.DEVI.com)

---


Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. DEVI and the DEVI logo-type are trademarks of Danfoss A/S. All rights reserved.

---

# **DEVireg 132**

**140F1011**

220-240V~  
50-60Hz~  
+5 to +35°C  
Temp. Limit +20 to  
+50°C  
16A/3680W@230V~  
IP 30

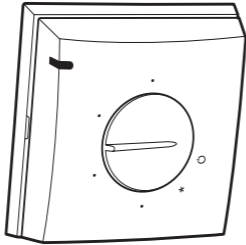

Product Documentation

DK EL 7224215014  
SE EL XXXXXX  
NO EL 5402692  
FI SSTL 3531132

Designed in Denmark for Danfoss A/S

